Filter Replacement

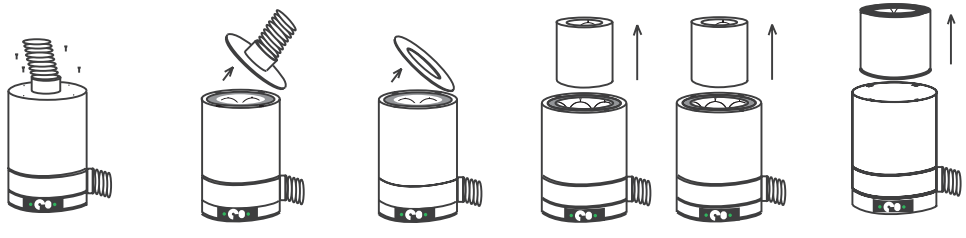

Remove the 4 screws on top

Take off the top

Take off the felt gasket

Pull out the prefilter

Pull out the carbon filter

Pull out the hepa filter

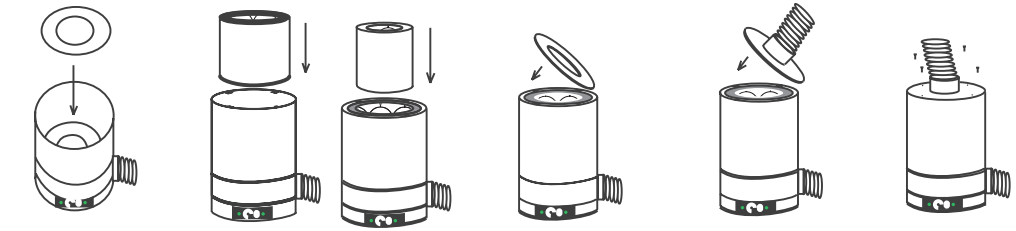

Replace the bottom felt gasket

Put in the new carbon filter

Put in the new prefilter

Replace the top felt gasket

Place de top cover so the 4 holes align

Tighten the 4 screws

Replacing the UV bulb

1. **Open** the filter chamber following the instructions
2. **Pull the bulb** upward out of the connector
3. **Push** the replacement bulb firmly into the connector
4. **Close** the filter chamber following instruction

Installation guide

Duct bypass

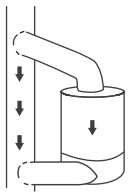

Vertical duct bypass

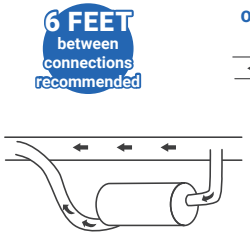

Horizontal duct bypass

Other installation

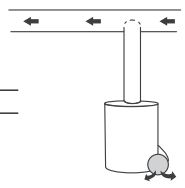

Extraction from duct

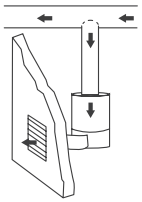

Duct to wall vent



Free air to wall vent

Wall mount brackets available

- Standard 5" flanges for easy connection
- No hardwire connection, plug-in only

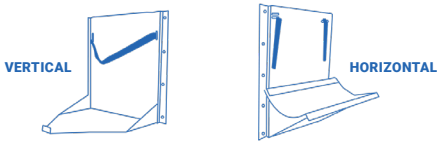

Airpura
AIR PURIFIERS

Germs and Mold

P600-W

user's manual



EXPERIENCE THE EVOLUTION OF CLEAN AND HEALTHY AIR AIRPURA.COM

To begin using your Airpura

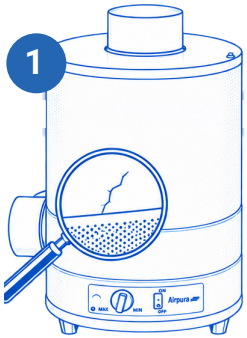

1. Inspect the exterior of your Airpura to verify there is no damage from shipping.If any damage is noted, please follow the instructions from the distributor returns policy.



2. Wipe the unit with a damp cloth to remove any dust from packaging.

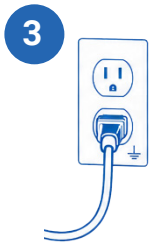

3. Plug the unit into a regular grounded 110 volt outlet.



4. Turn on the unit to MAX and allow it to run for at least **30 minutes**



5. Set the variable speed control to the level you wish

The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed 24 hours a day 7 days a week.

Always maintain a humidity level of approximately 40 % in your home to ensure the unit is operating at optimal levels. Overly humid conditions can have an adverse effect on the performance of the carbon. When using purifier with a dehumidifier, please keep dehumidifier at least **6 feet away.**



IMPORTANT SAFETY NOTE

PLEASE ENSURE AIR PURIFIER IS TURNED OFF WHEN PLUGGING INTO A POWER SOURCE.

FAILURE TO DO SO MAY RESULT IN MOTOR POTENTIALLY STALLING AND/OR BURNING.



Airpura Warranty

Scan the QR code to view the warranty and register your unit.

Discover your filters

Refer to the instructions on the last page to learn how to open your unit.

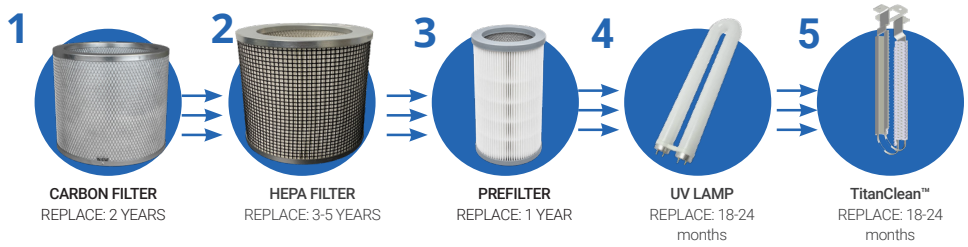

*Can be vacuumed from the exterior of the unit once a month or more often. Should be **replaced** at least after 12 months of use. To vacuum the prefilter, use the brush attachment on your vacuum cleaner and vacuum slowly around the mesh surface of the filter chamber.

Technical Specs

PREFILTER	Cellulose pre-filter	**AIR EXCHANGE PER HOUR**	2
CHEMICAL GAS & ODOR FILTER	2" Carbon Filter 18-lbs*, Activated Carbon Filter (100% Coconut Shell) *± 8 oz*	**SOUND NOISE**	35 db on low (at 6 feet) 62 db on high
MAIN PARTICLE FILTER	True HEPA filter (40 sq. ft) 99.97% Efficient at 0.3 microns	**COLORS**	Black
UV GERMICIDAL TECHNOLOGY	Range of 16-18 Watt UVC Germicidal Lamp	**HOUSING MATERIALS**	Powder coat steel
PHOTOCATALYTIC TECHNOLOGY	TitanClean Photocatalytic Oxidizer	**FAN SPEED**	Variable
VOLTAGE	115 or 220 volts	**CASTERS**	Yes
FAN SPEED	560 CFM (Free Flow)	**ETL CERTIFIED**	no 3067330 / UL 507 CSA C22.2#113

Air Purifiers Models And Filter Configurations

	Prefilter	Carbon	HEPA filter
ALTERNATIVES	Cotton prefilter Tar barrier	SuperGas	Super HEPA 14 Filter (99.99% of airborne particles ≥ 0.3 microns)