Filter Replacement


Remove the 4 screws on top


Take off the top


Take off the felt gasket

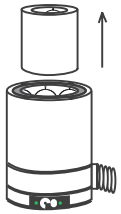
Pull out the prefilter

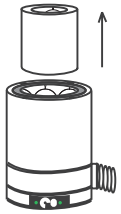
Pull out the carbon filter

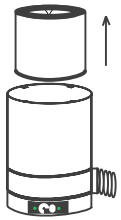
Pull out the hepa filter


Replace the bottom felt gasket

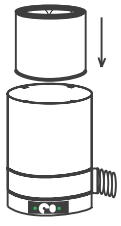
Put in the new carbon filter

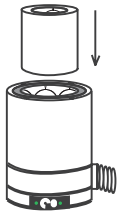
Put in the new prefilter


Replace the top felt gasket


Place de top cover so the 4 holes align


Tighten the 4 screws

Installation guide

Duct bypass

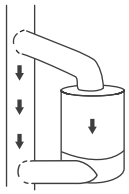
Vertical duct bypass



Horizontal duct bypass

Other installation

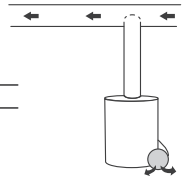
Extraction from duct

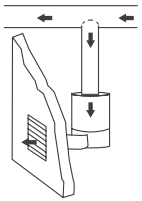
Duct to wall vent


Free air to wall vent

Wall mount brackets available

- Standard 5" flanges for easy connection
- No hardwire connection, plug-in only

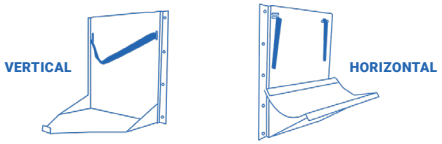

Airpura
AIR PURIFIERS

All Purpose

R600-W

user's manual



EXPERIENCE THE EVOLUTION OF CLEAN AND HEALTHY AIR

AIRPURA.COM

To begin using your Airpura

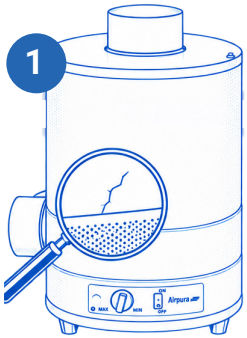

1. Inspect the exterior of your Airpura to verify there is no damage from shipping.If any damage is noted, please follow the instructions from the distributor returns policy.



2. Wipe the unit with a damp cloth to remove any dust from packaging.

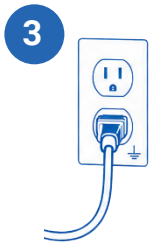

3. Plug the unit into a regular grounded 110 volt outlet.



4. Turn on the unit to MAX and allow it to run for at least **30 minutes**



5. Set the variable speed control to the level you wish

The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed 24 hours a day 7 days a week.

Always maintain a humidity level of approximately 40 % in your home to ensure the unit is operating at optimal levels. Overly humid conditions can have an adverse effect on the performance of the carbon. When using purifier with a dehumidifier, please keep dehumidifier at least **6 feet away.**



IMPORTANT SAFETY NOTE

PLEASE ENSURE AIR PURIFIER IS TURNED OFF WHEN PLUGGING INTO A POWER SOURCE.

FAILURE TO DO SO MAY RESULT IN MOTOR POTENTIALLY STALLING AND/OR BURNING.



Airpura Warranty

Scan the QR code to view the warranty and register your unit.

Discover your filters

Refer to the instructions on the last page to learn how to open your unit.

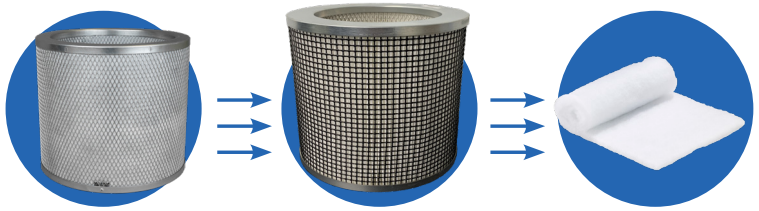

CARBON FILTER
REPLACE: 2 YEARS

HEPA FILTER
REPLACE: 3-5 YEARS

PREFILTER
REPLACE: 1 YEAR

*Can be vacuumed from the exterior of the unit once a month or more often. Should be **replaced** at least after 12 months of use. To vacuum the prefilter, use the brush attachment on your vacuum cleaner and vacuum slowly around the mesh surface of the filter chamber.

Technical Specs

PREFILTER	Poly pre-filter	**SOUND NOISE**	35 db on low (at 6 feet) 62 db on high
CHEMICAL GAS & ODOR FILTER	2" Carbon Filter 18-lbs*, Activated Carbon Filter (100% Coconut Shell) ** ± 8 oz*	**COLORS**	Black
MAIN PARTICLE FILTER	True HEPA filter (40 sq. ft) 99.97% Efficient at 0.3 microns	**HOUSING MATERIALS**	Powder coat steel
VOLTAGE	115 or 220 volts	**FAN SPEED**	Variable
FAN SPEED	560 CFM (Free Flow)	**CASTERS**	No
AIR EXCHANGE PER HOUR	2	**ETL CERTIFIED**	no 3067330 / UL 507 CSA C22.2#113

Air Purifiers Models And Filter Configurations

	Prefilter	Carbon	HEPA filter
ALTERNATIVES	Cotton prefilter Tar barrier	SuperGas	Super HEPA 14 Filter (99.99% of airborne particles ≥ 0.3 microns)