

Refill Bottle Insertion and Replacement

The refill bottle must be replaced approximately every 3 months

①



Shake well before use

②



Twist cap off bottle

③



Insert bottle into the Biologic Top Cap in a clockwise direction

④



Insert Top Cap into the Biologic base & Make sure the dispersal hole on the cap is aligned with the betterair logo on the base

⑤



Press the LED button

Safety Precautions

NEVER RAISE THE DEVICE BY HOLDING THE TOP CAP

(the magnets have been designed to ensure electrical conductivity but NOT designed to hold the weight of the device when lifted)

Warranty is only valid with the use of Enviro-Biotics®.

Do not immerse in or place the Biologic device near water, sinks or bathtubs.

Store Refill bottles in a cool dry place.



Specifications

Height: 19 cm

Diameter: 7 cm

Weight: 400 grams when cartridge is full (325 empty)

Working voltage: 5v DC

Battery Capacity: 2000mAh

Input -C-Type USB (5v charger not provided)

Operation Time: Up to 2 weeks

Coverage: approx. 50 sqm (538 sqft.)

Bottle capacity: 75 ml

Working temp: 2 - 50° C / 36 -122° F

Contact us

Contact@better-air.com |

© 2023 betterair international Limited , www.better-air.com

VER 1.2.4



betterair

Biologic

Total surface & air purifier

User Guide



The Biologic nourishes your indoor environment with a repetitive flow of Enviro-Biotics® that cleans surfaces objects and air, especially in those hard to reach areas. an environment rich in beneficial bacteria supports your well being.

www.better-air.com

Equipment and Accessories

- 1. Biologic base
- 2. Biologic cap
- 3. Biologic refill
- 4. Standard C-type USB cable



WARNING:

Read all the instructions before using the product.
Do not repair or modify the unit.
Do not alter the plug in any way. Do not use if the power cord or plug if damaged or the connection to the wall outlet is loose.
Do not damage, break, forcefully bend, pull, twist, bundle, coat, pinch, or place heavy objects on the power cord.
Remove the power plug from the outlet before cleaning the unit.
When removing the power plug, grasp by holding the plug itself, never hold by the cord.
Do not handle the power plug with wet hands.
Clean the unit with dry fabric, do not use detergent to clean the unit.





Charging

Please connect the C-type USB cable (provided) to a 5V charger (not provided)

Operation

- 1. Press the LED button to turn ON the device
 - 2. Press the button for two seconds to turn the device OFF
- In operation mode, the Biologic should disperse Enviro-Biotics® for only a few seconds at intervals of approx 60 minutes.
The device is idle in all other times but if Stand by is ON, the device is fully operational. to verify, Lightly press the button or use the application to force an unscheduled dispersion

LED Indicators

color				
Mode	Stand by	Fully charged	Charging	Dispersing

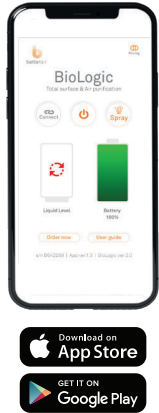
Position of the Biologic Device

For optimal coverage, place the Biologic device, only in its upright position, at the center of the treated area on a clean, dry levelled surface. For maximal coverage indoors, it is not advised to place the Biologic near an open door or a window that leads outdoors.
For optimal function, the biologic should be in an upright position.





Smart phone/Tablet app.

For accurate status ,it is recommended to use the "betterair Biologic" app. (download from Play store or Apple store).
After pairing, your Biologic should report the following:
• Liquid Level - the Biologic has an integral sensor that reports accurate liquid levels. When reaching "low level" It is recommended to order a refill.
• Battery Level - you should be notified of low battery and critical levels where the unit is about to shut down.
• Operations - you can turn device on/off and force dispersing manually.
Additional features will be added periodically, you may download upgrades at your convenience.



Alerts

Color		
Solid	Low battery	Low liquid / Stabilize device*
Blinking	Critical battery	Attention! Secure cap

Important

When Low Liquid (solid red) alert appears, consider replacing your Biologic refill bottle. You can re-order via your local betterair online store or via your local betterair distributor. The alert allows 2 weeks to replace the Biologic refill bottle before it is completely empty.

Caution

Do not place directly under lights or other heat sources over 38 celsius (100 Fahrenheit). Damage to the Biologic may occur.
***Avoid tilting, putting weight or applying excessive force on the unit, this may result in calibration fault of internal sensors.**